


PREFLIGHT INSPECTION

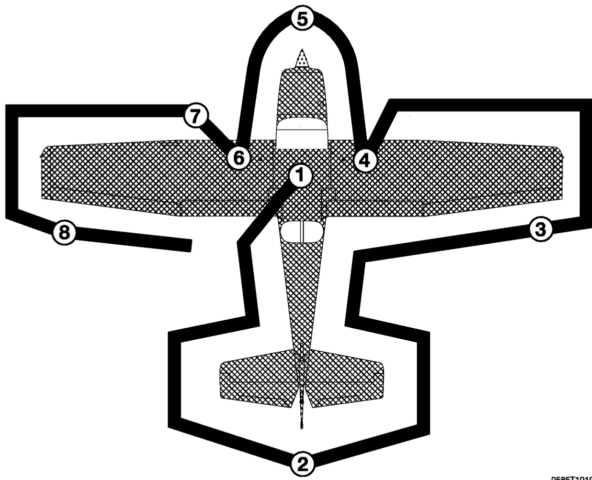

068571019

1. CABIN

1. Pitot Tube Cover	REMOVED
2. Pilot Operating Handbook	ACCESSIBLE TO PILOT
3. G1000 Cockpit Ref. Guide	ACCESSIBLE TO PILOT
4. Airplane Weight & Balance	CHECKED
5. Parking Brake	SET
6. Control Wheel Lock	REMOVED
7. Magnetos Switch	OFF/KEY REMOVED
8. Avionics Switch (Bus 1 & 2)	OFF
9. Master Switch (ALT+BAT)	ON
10. Primary Flight Display (PFD)	CHECK (PFD ON)
11. Fuel Quantity (L & R)	CHECK
12. Low Fuel L & R	CHECK NOT SHOWN
13. Oil Pressure Annunciator	CHECK SHOWN
14. Low Vacuum Annunciator	CHECK SHOWN
15. Avionics Switch (BUS 1)	ON
16. Fwd Avionics Fan	CHECK FAN IS HEARD
17. Avionics Switch (BUS 1)	OFF
18. Avionics Switch (BUS 2)	ON
19. PFD Warning	ACKNOLWEDGED
20. Aft Avionics Fan	CHECK FAN IS HEARD
21. AutoPilot Self-Test Warning	CHECK
22. Avionics Switch (BUS 2)	OFF
23. Pitot Heat Switch	ON & CHECK
24. Pitot Heat Switch	OFF
25. Low Volts Annunciator	CHECK SHOWN
26. Master Switch (ALT+BAT)	OFF
27. Elevator Trim	TAKE OFF POSITION
28. Fuel Selector Valve	BOTH
29. ALT Static Air Valve	OFF (Pushed In)
30. Fire Extinguisher	CHECK COND & ATT.

2. EMPENNAGE

1. Baggage Compartment Door	OPEN
2. Fuel Dripstick & Draincup	OBTAIN
3. Baggage Compartment Door	CLOSE
4. Empennage General Condition	CHECK
5. Left Horiz. Stab. Leading Edge	CHECK
6. Elevator Horn Balance (Left)	CHECK
7. Elevator	FREE & SECURE
8. Elevator Bonding Strap	CHECK
9. Elevator Static Disch (2)	CHECK
10. Elevator Hinge	CHECK
11. Rudder Ctrl Cable Interconnect	CHECK
12. Rudder Steering Horn	CHECK
13. Elevator Steering Horn	CHECK
14. Tail Tiedown	DISCONNECTED
15. Rudder Trim	CHECK
16. Rudder Static Disch (2)	CHECK
17. Rudder Gust Lock	REMOVE
18. Rudder Hinges	CHECK
19. VOR/GS Antennas (2)	CHECK
20. Rudder Horn Balance	CHECK
21. Beacon Light	CHECK
22. Navigation Light	CHECK
23. Rudder Ctrl Cable Interconnect	CHECK
24. Rudder Steering Horn	CHECK
25. Elevator Steering Horn	CHECK
26. Elevator Trim Actuator	CHECK
27. Elevator Trim Piano Hinge	CHECK
28. Elevator Hinges	CHECK
29. Elevator Static Disch (2)	CHECK
30. Elevator Bonding Strap	CHECK
31. Elevator Horn Balance (Right)	CHECK
32. Elevator	FREE & SECURE
33. Right Horiz. Stab. Leading Edge	CHECK
34. Empennage General Condition	CHECK
35. Aft Empennage Access Panel	CHECK
36. ELT Antenna	CHECK
37. VHF COM/GPS Antennas (2)	CHECK
38. OAT Probe	CHECK
39. GDL XM Antenna	CHECK
40. Marker Beacon Antenna	CHECK
41. XDPR Antenna	CHECK
42. DME Antenna (If Installed)	CHECK
43. ADF Antenna (If Installed)	CHECK

3. RIGHT WING TRAILING EDGE

1. Flap	CHECK, SECURE
2. Flap Tracks (2)	CHECK
3. Flap Actuator	CHECK
4. Aileron	FREE & SECURE
5. Aileron Piano Hinges	CHECK
6. Aileron Actuator	CHECK
7. Aileron Bonding Strap	CHECK
8. Aileron Balance Weights (3)	CHECK
9. Aileron Static Disch (2)	CHECK
10. Wing Fairing	CHECK
11. Strobe Light	CHECK
12. Navigation Light	CHECK
13. Navigation Light Indicator	CHECK
14. Wingtip Fence	CHECK

4. RIGHT WING

1. Leading Edge	CHECK
2. Land/Taxi Light (If inst.)	CHECK
3. AOA Vane (If inst.)	CHECK (NO TOUCH)
4. Wing Tie Down	DISCONNECT
5. Cabin Air Intakes (2)	CHECK
6. Main Wheel Tire & Brakes	CHECK
7. Fuel Quick Drains (5)	DRAIN
8. Fuel Quantity (Dripstick)	CHECK VISUALLY
9. Fuel Filler Cap	SECURE/VENT CLEAR

5. NOSE

1. Cabin Air Vent	CHECK CLOSED
2. Engine Cowling	CHECK, SECURE
3. Strainer/Quick Drains (3)	DRAIN
4. Engine Oil Dipstick/Cap	
a) Oil Level	CHECK (MIN 5, MAX 8)
b) Dipstick/Filler Cap	SECURE
5. Engine Cooling Air Inlets	CHECK, CLEAR
6. ALTN Belt	CHECK TENSION
7. Starter Cam Wheel	CHECK
8. Propeller & Spinner	CHECK
9. Air Filter	CHECK
10. Exhaust	CHECK
11. Nosewheel Strut	CHECK INFLATION
12. Shimmy Damper	CHECK
13. Steering Rods/Collar	CHECK
14. Nosewheel Tire	CHECK
15. Ext. Power Acc. Panel	CLOSED
16. Static Port	CHECK, CLEAR
17. Engine Drain Tubes	CHECK, NO LEAKS

6. LEFT WING

1. Fuel Quick Drains (5)	DRAIN
2. Fuel Quantity (Dripstick)	CHECK VISUALLY
3. Fuel Filler Cap	SECURE/VENT CLEAR
4. Main Wheel Tire & Brakes	CHECK

7. LEFT WING LEADING EDGE

1. Cabin Air Intakes (2)	CHECK
2. Leading Edge	CHECK
3. Pitot Tube	CHECK
4. Fuel Tank Vent Opening	CHECK
5. Stall Warning Opening	CHECK
6. Wing Tie Down	DISCONNECT
7. Land/Taxi Light	CHECK

8. LEFT WING TRAILING EDGE

1. Wingtip Fence	CHECK
2. Navigation Light Indicator	CHECK
3. Navigation Light	CHECK
4. Strobe Light	CHECK
5. Wing Fairing	CHECK
6. Aileron Static Dischargers (2)	CHECK
7. Aileron Balance Weights (3)	CHECK
8. Aileron Bonding Strap	CHECK
9. Aileron Actuator	CHECK
10. Aileron Piano Hinges	CHECK
11. Aileron	FREE & SECURE
12. Flap Actuator	CHECK
13. Flap Tracks (2)	CHECK
14. Flap	CHECK, SECURE
15. Baggage Compartment	OPEN
16. Fuel Dripstick & Draincup	STOWED
17. Towbar	REMOVED & STOWED
18. Chocks	REMOVED & STOWED
19. Baggage Compartment	CLOSED & LOCKED

BEFORE ENTERING CABIN/AFTER REFUELING

1. Taxi Area (Propwash)	FREE
2. Fuel Filler Caps	BOTH SECURE
3. Bonding Cable/Fuel Hose	REMOVED
4. Ladders	REMOVED
5. Fuel Mat	REMOVED & STOWED
6. Towbar	REMOVED & STOWED
7. Chocks	REMOVED & STOWED
8. Tie Downs	REMOVED & STOWED
9. Baggage Compartment	CLOSED & LOCKED